

Snap-In Module 4-Port Surface Mount Box

278-2093

OWNER'S MANUAL — Please read before using this equipment.

Thank you for purchasing the RadioShack Snap-In Module 4-Port Surface Mount Box. It is compact and easy to install. It works with other snap-in modules, which can be purchased at your local RadioShack store. The label under the transparent cover is for identifying different systems or stations.

Supplied Items	# of Pieces
Upper Case	1
Lower Case	1
Detachable 2-Port Snap-In Modules	2
Labels	2
Double-Sided Tape	1
Transparent Covers	2
Wire Ties	4
Screws	2

Required Tools	Optional Items
Flat-Blade Screwdriver	Snap-In Jacks and Couplers
Exacto Knife	Protective Cap

WARNING:
To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.


CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

The lightning symbol is intended to alert you to the presence of uninsulated dangerous voltage within this product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

The exclamation symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

INSTALLATION

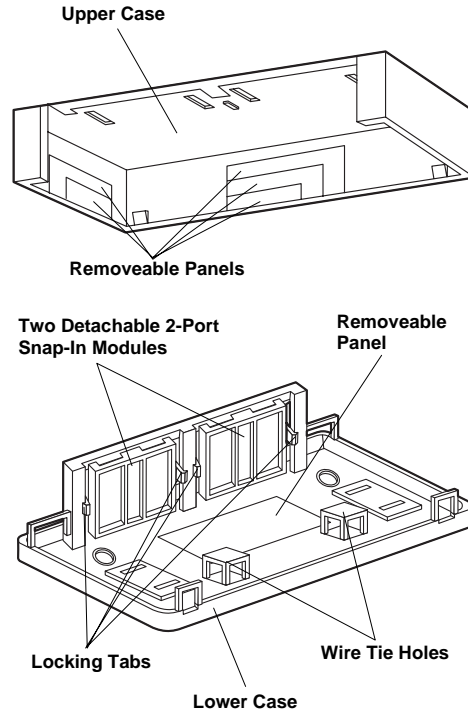

1. Insert a narrow, flat-blade screwdriver into the two slots between the upper and lower case, then twist to separate the case halves.
2. Use an exacto knife to remove the desired panel(s) from the case, then route the cable(s) through that slot. For example, if a cable comes from the wall outlet, remove the panel from the lower case; if a cable comes from the right side, then remove a panel from the upper case's right side.

Note: When the panel is removed from the lower case, sharp edges may be left from the tabs. To prevent potential injury, sand down the sharp edges.

3. Press the locking tabs on the lower case to remove the snap-in modules.
4. Mount one or more snap-in jacks and couplers (not supplied, available at your local RadioShack store) on the snap-in modules by matching the top of the jacks with the direction of the up-arrows on the back of the snap-in modules, then snapping them into the front panel.

Note: If you do not use all four ports, attach a protective cap (available at your local RadioShack store) to each unused port to prevent dust from entering the case.

5. Connect the cable to the snap-in jack(s) and coupler(s), then reattach the snap-in modules to the front panel. Be sure the snap-in modules' up arrows are on the top.
6. Route the supplied wire ties through the wire tie holes, then hold and tie all cables in a bundle.
7. Drive the supplied screws into the lower case's round holes to attach it to a wall, use the double-sided tape to mount it on a desk or file cabinet, or use the magnets on the lower case to hold it on any metal surface. To prevent slippage, use the magnet on a horizontal rather than vertical metal surface.
8. Snap the upper case back onto the lower case.
9. Mark the supplied labels to identify the systems or stations, then fix the labels with the plastic covers on the upper case.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor,
Fort Worth, TX 76102

12/99